#### TI-NEO-DTF SwanTile™ Shower Wall Kit

#### SWANTILE™ SHOWER WALL KITS


### Manufactured from Veritek®

(See page 2 for detailed information.)

# WARRANTY Limited Lifetime - Residential Limited 5-year - Commercial

#### **FEATURES**

- Compression molded Veritek® is a composite material with no surface coating to chip or crack.
- For use with Swanstone, Veritek® and other standard shower floors.
- Glue-up three piece shower wall panel system.

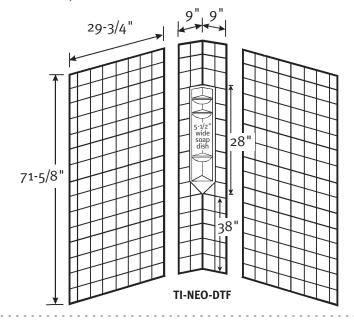

#### TI-NEO-DTF

Designed to fit wall areas 36"-38"D to 36"-38"W x 71-5/8" high (914 mm x 914 mm to 965 mm x 965 mm x 1819 mm)

#### **SPECIFICATIONS**

#### TI-NEO-DTF SwanTile™ Shower Wall Kit

Model	Part	Wall Area Designed To Fit	Ship Wt. Lb.	Ship FedEx	Carton Dims. In.	Cu. Ft.
TI-NEO-DTF	NEoooooTI	36"-38" D to 36"-38"W x 71-5/8" H	57	-	73 x 32 x 8	10.82
(914 mm x 914 mm to 965 mm x 965 mm x 1819 mm)						

Kit Includes: One back panel with molded-in shelves, two side panels, two apron strips and installation materials.

Packaging: Each kit is packed in a flat, rectangular carton.

#### **COLORS**

(See inside back cover for color sample.)

- White (010)
- Bright White (137)
- Bone (037)
- Pearl (138)
- Bisque (018)

## MAINTENANCE AND CLEANING INFORMATION

Clean regularly with common household liquid cleaners and a sponge or soft cloth. For hard water stains, scale removers can be used. To protect finish, fiberglass wax or automotive paste wax can be applied. **Do not** use abrasive cleaners or scouring pads. Do not use "leave on" cleaning products, such as automatic spray shower cleaners. Prolonged contact with harsh chemicals could have an adverse reaction over time and discolor surfaces. **Do not** use cleaning agents that caution use on acrylic, polyester or plastics.

#### SUPPORT DOCUMENTS

Installation instructions available at swanstone.com.

